


NORD TANK



NTK 150 XLR

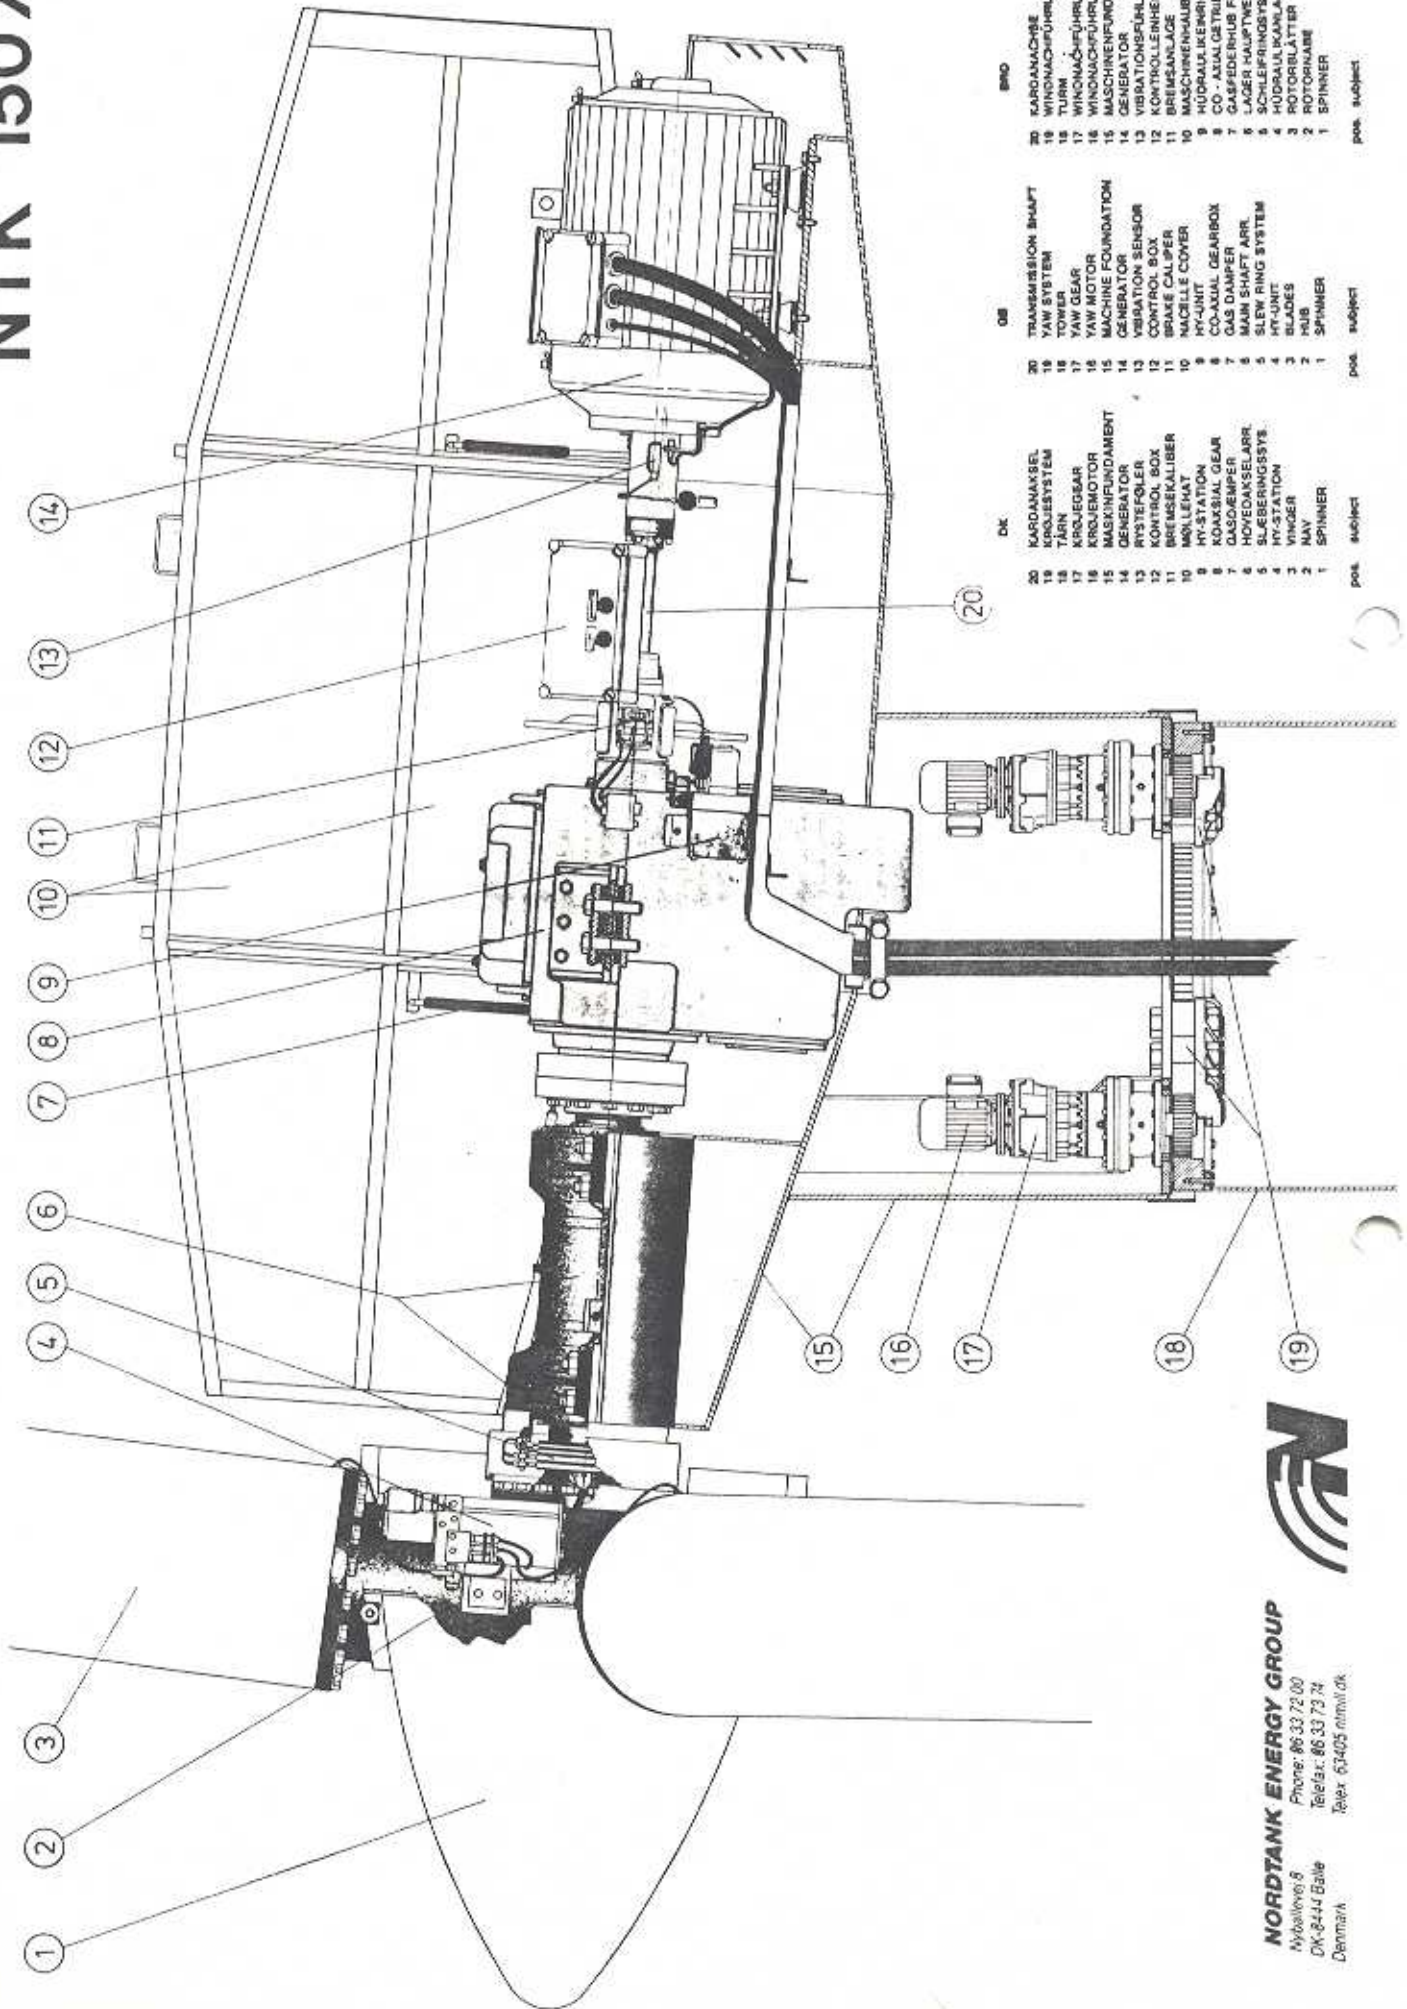

- | | | | | | |
|-----------|--|-----------|--|------------|--|
| DK | KARDANAKSEL
KROJESYSTEM
TÅRN
KROJEGEAR
KROJEMOTOR
MASKINFUNDAMENT
GENERATOR
RYSTEFØLER
KONTROL BOX
BREMSEKALIBER
MØJLEHED
HY-STATION
KONAKSIAL GEAR
DAGSDÆMPER
HJØRNESEKSEL
SÆBERENDESSYS
HY-STATION
VINGER
NAV
SPINNER | GB | TRANSMISSION SHAFT
YAW SYSTEM
TOWER
YAW GEAR
YAW MOTOR
MACHINE FOUNDATION
GENERATOR
VIBRATION SENSOR
CONTROL BOX
BRAKE CALIPER
NACELLE COVER
HY-UNIT
CO-AXIAL GEARBOX
DAILY DAMPER
MAIN SHAFT
SLEW RING SYSTEM
HY-UNIT
BLADES
HUB
SPINNER | BRD | KARDANACHSE
WINDNACHFUHRUNGSSYSTEM
TURM
WINDNACHFUHRUNGSSORTER
WINDNACHFUHRUNGSMOTOR
MASCHINENFUNDAMENT
GENERATOR
VIBRATIONSFÜHLER
KONTROLLENHEIT
BREMSANLAGE
MASCHINENHAUBE
HÜHRHAUKEINRICHTUNG
CO - AXIALGETRIEBE
GÄSPEDENHÜB FÜR HAUBE
TÄGERHAUPTWELLE
SCHWUNGENSYSTEM
MOTORALKANALAGE
ROTORBLÄTTER
ROTORHAUBE
SPINNER |
| 20 | 19 | 20 | 20 | 20 | |
| 18 | 18 | 18 | 18 | 18 | |
| 17 | 17 | 17 | 17 | 17 | |
| 16 | 16 | 16 | 16 | 16 | |
| 15 | 15 | 15 | 15 | 15 | |
| 14 | 14 | 14 | 14 | 14 | |
| 13 | 13 | 13 | 13 | 13 | |
| 12 | 12 | 12 | 12 | 12 | |
| 11 | 11 | 11 | 11 | 11 | |
| 10 | 10 | 10 | 10 | 10 | |
| 9 | 9 | 9 | 9 | 9 | |
| 8 | 8 | 8 | 8 | 8 | |
| 7 | 7 | 7 | 7 | 7 | |
| 6 | 6 | 6 | 6 | 6 | |
| 5 | 5 | 5 | 5 | 5 | |
| 4 | 4 | 4 | 4 | 4 | |
| 3 | 3 | 3 | 3 | 3 | |
| 2 | 2 | 2 | 2 | 2 | |
| 1 | 1 | 1 | 1 | 1 | |



NORDTANK ENERGY GROUP
 Hvidovre 8 Phone: 86 33 72 00
 DK-8444 Balle Telefax: 86 33 73 74
 Denmark Telex: 63405 nntml dk